


N3000 series INSTALLATION INSTRUCTIONS

Available in EN / FR / NL / DE / IT / ES / SV / SL

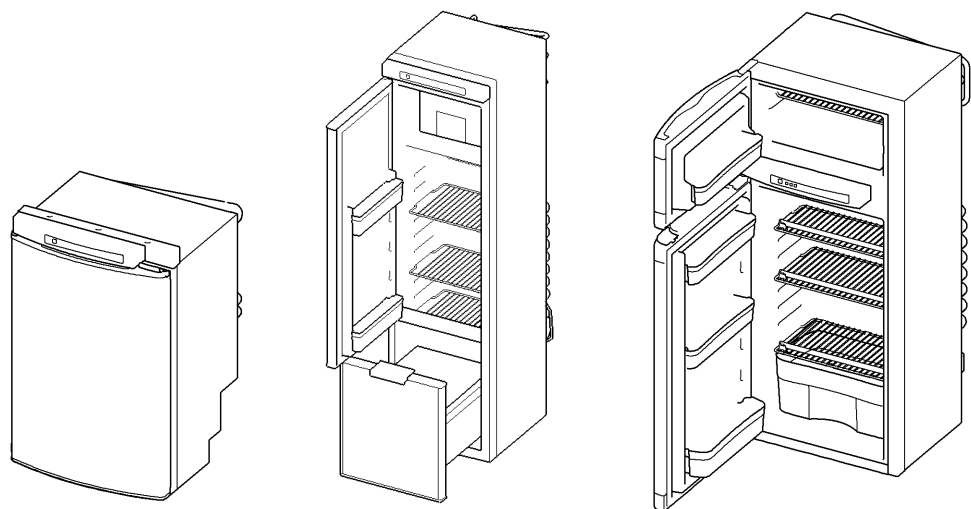

THETFORD  *Loving leisure*

CONTENTS

CONTENTS	2
GENERAL	3
1 INTRODUCTION	3
1.1 Symbols used.....	3
1.2 Fridge designation.....	3
1.3 Available drawings and models	3
2 SAFETY INSTRUCTIONS	4
3 STANDARDS / LEGISLATION	5
4 CUSTOMER SERVICE	5
4.1 Installation audit form	5
4.2 Serviceability.....	5
FITTING & CONNECTIONS	6
5 GENERAL DIMENSIONS	6
6 WALL	7
7 FLOOR	9
8 POWER SUPPLY	10
8.1 AC	10
8.2 DC	10
8.3 Gas	10
8.4 Wiring diagram	11
INSTALLATION INSTRUCTIONS	12
9 MOUNTING DIMENSIONS	12
10 VENTS	13
10.1 Vent 186 x 483.....	15
10.2 Vent 257 x 432.....	16
10.3 Vent 281 x 533.....	18
11 SEALING	19
12 DOOR PANELS FRAMED DOORS	20
13 DOOR CONVERSION	23
14 HANDLING	25
OPTIONS	26
15 VENTILATOR KIT	26
CONTACT	27

GENERAL

1 INTRODUCTION

These installation instructions provide you with the necessary information for correct and safe installation of the Thetford N3000 series refrigerators. Thetford also provides 2D-drawings and 3D-files for further reference.

1.1 Symbols used



OK



Not OK



Tip



Special attention required



Caution (possible risk of injury or product damage)

1.2 Fridge designation

Each refrigerator has a specific identification code, the fridge designation. The different positions stand for different variations of the refrigerator. In these instructions, the designation will be used as reference.

Designation example: N3097 – N121F004L06E

N3	097	–	N	121	F	004	L	06	E	+
	<i>Fridge volume</i>			<i>Type foamed cabinet</i>	<i>Type of cooling unit</i>	<i>Type of door</i>	<i>Hinge position</i>	<i>Type of control panel</i>	<i>Type of display</i>	



1.3 Available drawings and models

Designation	Description	2D drawing*	3D model
N3080 – x xxx x xxx x xx E	N3080	le942	le932
N3090 – x xxx x xxx x xx E / N3090 – x xxx x xxx x xx A	N3090	le943	le933
N3097 – x xxx x xxx x xx E / N3097 – x xxx x xxx x xx A	N3097	le944	le934
N3100 – x xxx x xxx x xx E / N3100 – x xxx x xxx x xx A	N3100	le945	le935
N3104 – x xxx x xxx x xx E / N3104 – x xxx x xxx x xx A	N3104	le946	le936
N3108 – x xxx x xxx x xx E / N3108 – x xxx x xxx x xx A	N3108	le947	le937
N3112 – x xxx x xxx x xx E / N3112 – x xxx x xxx x xx A	N3112	le948	le938
N3115 – x xxx x xxx x xx E	N3115	le962	le961
N3141 – x xxx x xxx x xx E / N3141 – x xxx x xxx x xx E+ / N3141 – x xxx x xxx x xx A	N3141	le1122	le1124
N3142 – x xxx x xxx x xx E / N3142 – x xxx x xxx x xx E+ / N3142 – x xxx x xxx x xx A	N3142	le1123	le1125
N3145 – x xxx x xxx x xx E / N3145 – x xxx x xxx x xx A	N3145	le949	le939
N3150 – x xxx x xxx x xx E / N3150 – x xxx x xxx x xx A	N3150	le950	le940
N3170 – x xxx x xxx x xx E / N3170 – x xxx x xxx x xx A	N3170	le1058	le1062
N3175 – x xxx x xxx x xx E / N3175 – x xxx x xxx x xx A	N3175	le951	le941
N.A.	"Power Cable Connections"	le952	N.A.

* The 2D drawings consist of:

- product dimensions
- screw positions
- hinge position

2 SAFETY INSTRUCTIONS

	<p>Before installing a Thetford N3000 series refrigerator, you need to observe the underneath precautions and general recommendations.</p>
General	<ul style="list-style-type: none"> ▪ The refrigerator is designed for powering by liquid gas (propane, butane or a mixture of these both), 12V DC or 230V AC. ▪ Never open or damage the cooling device at the rear of the refrigerator. The cooling system is pressurised and contains substances harmful to health. ▪ Never expose the refrigerator to water or moisture. ▪ The performance of the refrigerator may be affected by adjacent heat sources such as an oven or stove. Protect the refrigerator against any heat source by fitting insulation.
Installation	<ul style="list-style-type: none"> ▪ Only a qualified person is allowed to install the refrigerator and its electrical and gas components. ▪ Install the refrigerator in accordance with the local/national laws. ▪ The electrical connections and gas components must be installed in accordance with the latest technical regulations. ▪ There are sharp edges and corners at the rear of the refrigerator. Always wear protection against cuts when installing the refrigerator. ▪ Incorrect installation or maintenance of the refrigerator may cause physical injury and/or damage to the refrigerator. ▪ The refrigerator must be sealed from the living area of the caravan or motor home according EN 1949. Air for the burner must not be drawn from the living area of the caravan or motor home and combustion gases must not enter the living area. ▪ To cool the system and to supply the burner with sufficient airflow, make sure that there is always sufficient ventilation through the outside vents. ▪ The gas pipe has to be installed free of tension ▪ The refrigerator must be installed in a way that allows easy access for maintenance and repairs.
Maintenance	<ul style="list-style-type: none"> ▪ Only a qualified installation person is allowed to maintain, remove or repair (electronic or gas components of) the refrigerator. ▪ Never use naked flames whilst performing maintenance or repairs on gas lines or when checking fittings for leaks. Gas may ignite and cause an explosion resulting in serious physical injury and/or damage to the product. ▪ Never reposition or change the electronic or gas components or parts.
Use of gas	<div>  </div> <ul style="list-style-type: none"> ▪ The refrigerator only runs on liquid gas (propane, butane or a mixture of these both). It does not run on natural gas or coal gas. ▪ The fully installed refrigerator must allow proper and complete discharge of combustion gases. Combustion gases may contain carbon monoxide. Inhalation of this gas may cause tightness of the chest, dizziness and can lead to death. ▪ Combustion gases must always be discharged upwards. ▪ It is recommended to use an additional filter when operating on Liquefied Petroleum Gas (LPG)

3 STANDARDS / LEGISLATION

2006/95/EC Low Voltage Directive	
2009/142/EC Gas Appliances Directive	
2009/19/EC (2004/104/EC) Automotive EMC Directive	
EN 732:1998	EN 60335-2-102:2006
EN 1949:2011	EN 55014-1:2007
EN 60335-1:2010	EN 55014-2:1998
EN 60335-2-24:2010	

4 CUSTOMER SERVICE

4.1 Installation audit form

Thetford offers an additional service by auditing the installation of its products. This means that before a Thetford product is installed a Thetford local service representative will carry out a specific audit based on the Thetford installation instructions. The audit is meant as a reference for the specific model to ensure correct installation. In any case the Thetford local service representative can be contacted for any additional support related to the installation of the product.


4.2 Serviceability

The installer of Thetford products is responsible for proper installation to ensure the correct functionality and serviceability of the appliance. In terms of serviceability, this means that a dealer or an authorised Thetford service partner must be able to de-install and re-install the Thetford products within the time that is allowed according the Thetford time-list, using standard tools and equipment.

This is to claim any warranty during the period of 3 years after purchase date. The serviceability of the product is also included in the audit. In case of any queries on this subject, please contact the Thetford local service representative before installing the product.

FITTING & CONNECTIONS

5 GENERAL DIMENSIONS

Model information		Overview of all available models of the Thetford N3000 series refrigerators.					
	Display	Dimensions HxWxD (mm)*	Total volume(L)	Volume freezer (L)	Energy consumption (kWh/24h) ****	Energy consumption gas (gr./24h)****	Net weight (kg)
N3080 – x xxx x xxx x xx E	LED	821x486x543	81	10	2.4	240	22.5
N3090 – x xxx x xxx x xx E	LED	821x525x543	89	11	2.6	270	22.5
N3090 – x xxx x xxx x xx A	LCD	821x525x543	89	11	2.6	270	22.5
N3097 – x xxx x xxx x xx E	LED	821x525x578	96	11	2.6	270	23.5
N3097 – x xxx x xxx x xx A	LCD	821x525x578	96	11	2.6	270	23.5
N3100 – x xxx x xxx x xx E	LED	821x525x543	97	11	2.8	330	27
N3100 – x xxx x xxx x xx A	LCD	821x525x543	97	11	2.8	270	27
N3104 – x xxx x xxx x xx E	LED	821x525x578	105	11	2.8	270	27
N3104 – x xxx x xxx x xx A	LCD	821x525x578	105	11	2.8	270	27
N3108 – x xxx x xxx x xx E	LED	821x525x593	106	14	2.6	270	24
N3108 – x xxx x xxx x xx A	LCD	821x525x593	106	14	2.6	270	24
N3112 – x xxx x xxx x xx E	LED	821x525x628	113	14	2.6	330	24
N3112 – x xxx x xxx x xx A	LCD	821x525x628	113	14	2.6	330	24
N3115 – x xxx x xxx x xx E	LED	821x525x650	115	14	2.6	330	25
N3141 – x xxx x xxx x xx E	LED	1500x418x561**/****	141	15	3.9	400	38
N3141 – x xxx x xxx x xx E+	LED+	1500x418x561**/****	141	15	3.9	400	38
N3141 – x xxx x xxx x xx A	LCD	1500x418x561**/****	141	15	3.9	400	38
N3142 – x xxx x xxx x xx E	LED	1500x418x561**/****	142	15	3.9	400	37
N3142 – x xxx x xxx x xx E+	LED+	1500x418x561**/****	142	15	3.9	400	37
N3142 – x xxx x xxx x xx A	LCD	1500x418x561**/****	142	15	3.9	400	37
N3145 – x xxx x xxx x xx E	LED	1245x525x543	141	23	4.0	420	37
N3145 – x xxx x xxx x xx A	LCD	1245x525x543	141	23	4.0	420	37
N3150 – x xxx x xxx x xx E	LED	1245x525x578	149	25	4.0	420	37.5
N3150 – x xxx x xxx x xx A	LCD	1245x525x578	149	25	4.0	420	37.5
N3170 – x xxx x xxx x xx E	LED	1245x525x593	167	29	4.0	420	39
N3170 – x xxx x xxx x xx A	LCD	1245x525x593	167	29	4.0	420	39
N3175 – x xxx x xxx x xx E	LED	1245x525x628	175	31	4.0	420	39.5
N3175 – x xxx x xxx x xx A	LCD	1245x525x628	175	31	4.0	420	39.5
		 For more detailed information Product Information Sheets per model are available on request.					







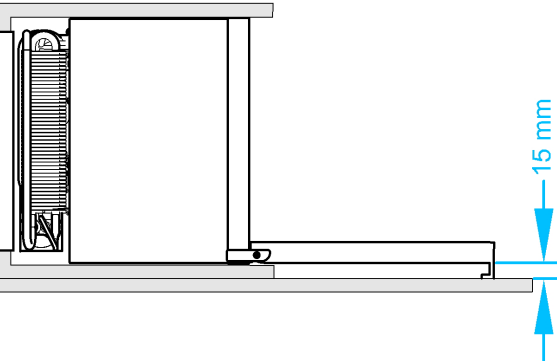
* Depth inclusive door.



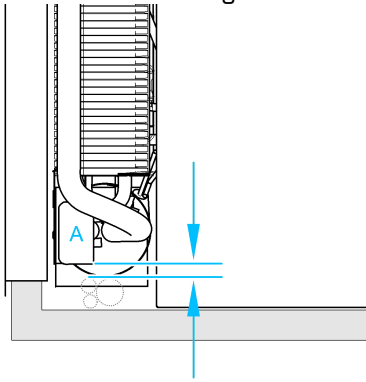
** Depth inclusive door and 15mm protrusion of the door handle.

*** Dimension is excluding feet. Additional height feet: 3 mm


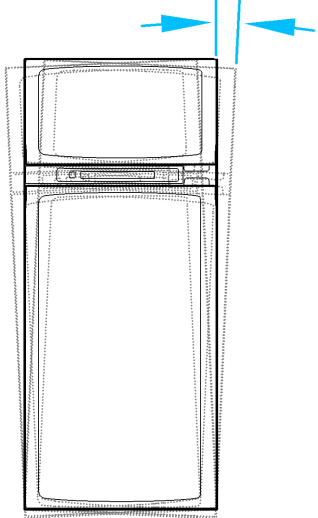

**** Average energy consumption at an ambient temperature of 25°C

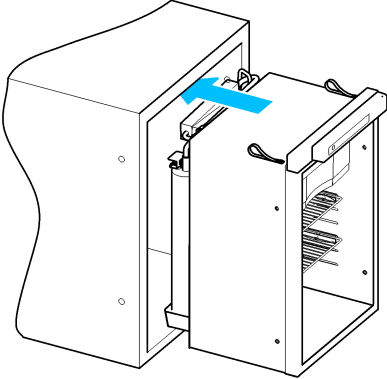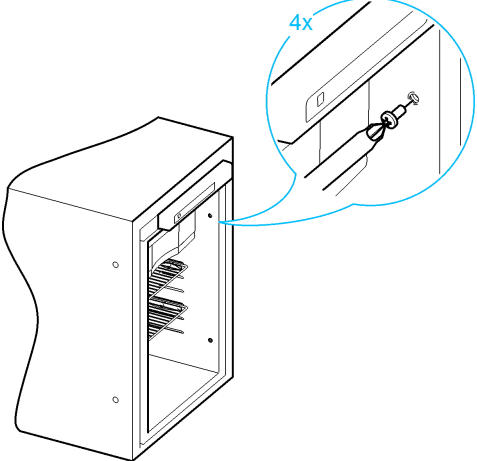6 WALL

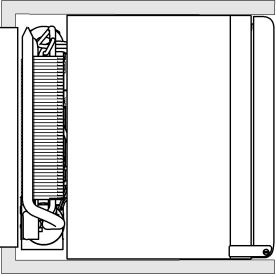Build-in situation	<p>The refrigerator must be installed in a completely air-tight sealed place from the living area of the vehicle. Use screws to fixate the refrigerator, and the white caps for finishing.</p>
	<p>1. </p> <p>2. </p> <p> It is not allowed to screw into the fridge cabinet. If needed, please contact Thetford for further assistance.</p>
	<p> Only for model N3141 and N3142 there is also the possibility to build in the refrigerator in such a way that the refrigerator door is aligned with the front of the installation cabinet.</p> <p></p> <p> When a model N3141 and N3142 refrigerator is put next to a wall, it is important to keep underneath minimal distance between the door and the wall, to be able to open the door completely.</p> <p></p> <p>Screws + caps 4 screws and 4 white caps are supplied by Thetford. For models N3141, N3142, N3145, N3150, N3170 and N3175 6 screws and 6 white caps are supplied</p>

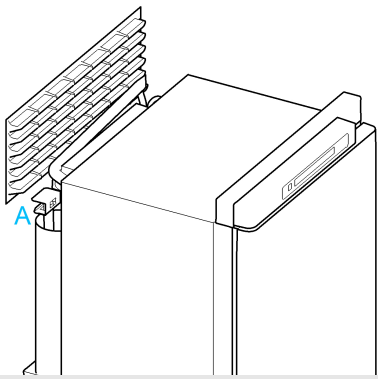Heat cap	<p>Combustion gasses will be extracted via the heat cap (A) through the upper vent, when installed properly.</p> 
	<p>For PVC tubes and/or water tubes within the sealing space, Thetford recommends using a heat shield or creating a minimal distance between heat cap and tubes as stated below.</p>  <p>Min. 35 mm</p>

7 FLOOR

Tilting	
	<p>For optimum performance the refrigerator must be level. Performance is still guaranteed within the limits shown below.</p> 
	<p>Nominal 0° / level Tolerance ± 2.5°</p>
	<p>Tilt of the chassis or floor of the vehicle can already be a few degrees.</p>
Floor conditions	
	<p>The refrigerator must be placed on a flat and stable floor</p>
Distance	
N3141 / N3142	<p>Minimum distance between bottom of the fridge and the floor is 12mm.</p>

8 POWER SUPPLY



The electrical connections have to comply with EN 60335-1. All electrical components must be in accordance with the latest technical regulation. Only a qualified person is allowed to install the electrical and gas connections, in such a way that wires can't come into contact with hot or sharp parts.


8.1 AC

It is obligated to connect the AC wiring to a properly earthed power point.	
AC	230V
Operating window	220-250V / 50-60Hz
Fuse	2A slow

8.2 DC

These models have 2 connection points to prevent the battery from being discharged by the refrigerator when the engine is not running.	
DC	12V
Power requirement 12V high current	12V – 14.4V at the fridge (when 12V heaters are enabled)
Cable dimensions (preferred)	< 2.5 m 4 mm ²
	< 3.5 m 6 mm ²
	< 6 m 10 mm ²
Fuse high-current	20A
High current supply	red cable (+) and white cable (-) for heating element. Only switched if signal on D+
Fuse low-current	1.1A
Low current supply	purple (+) and black (-) for electronics.
D+ signal	orange, + when engine runs


8.3 Gas

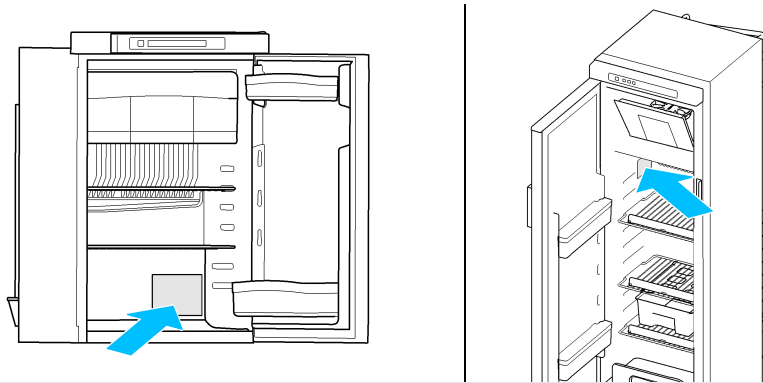The gas connection has to comply with EN 1949 and EN 732	
Category	C ₁₁
Gas type	<p>I₃₊ (G30: 28-30/G31: 37 mbar) for BE, FR, EI, LU, PT, ES, GB, GR, IT</p> <p>I_{3B}/I_{3P} (G30/G31: 28-30 mbar for DK, DE, IS, NL, SE, FI, NO)</p> <p>Butane = G30 / Propane = G31</p>
Diameter gas tube	8 mm
Gas pressure	Look on the serial label inside the refrigerator (behind the vegetable bin or on the left side underneath the freezer) for pressure settings of the gas pressure control.
	
Other information	For detailed information about the type and dimensions of the inlet of the gas tube, technical drawings are available on request.

8.4 Wiring diagram




Cables, except heater cables, should not touch the burner box.

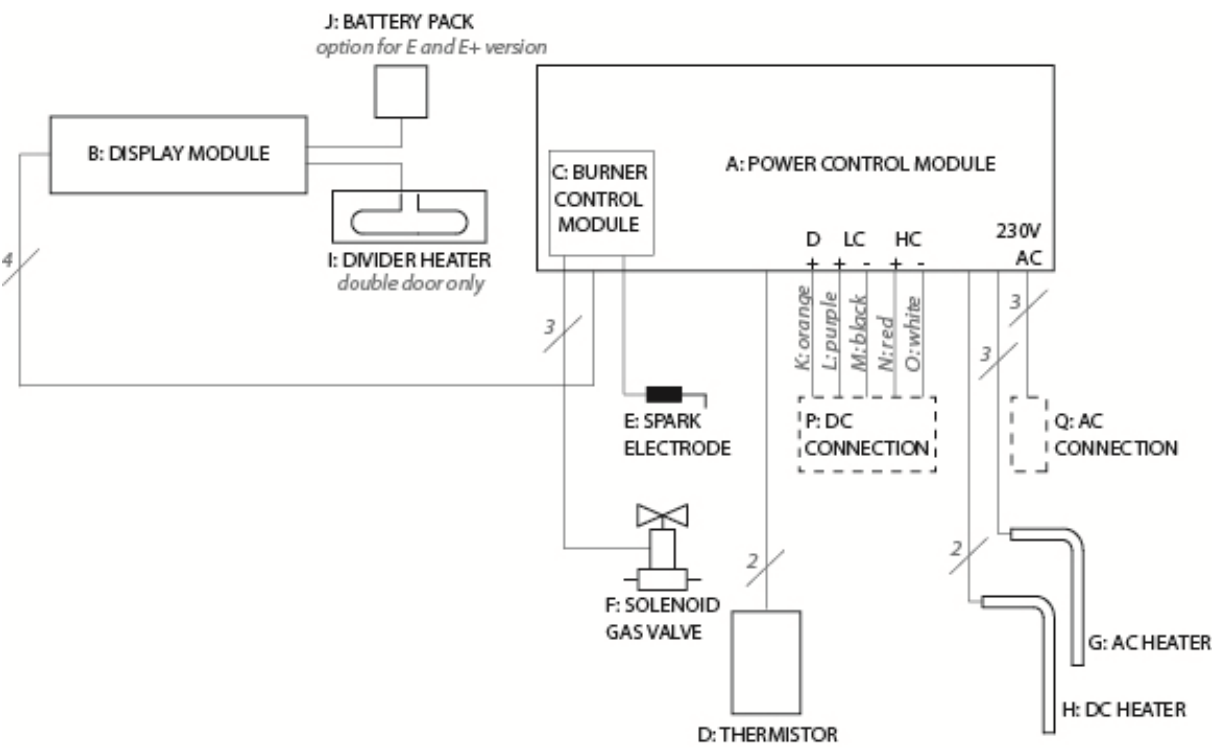

Connectors | See le952 'Power Cable Connections' for connector set up.

INSTALLATION INSTRUCTIONS

9 MOUNTING DIMENSIONS

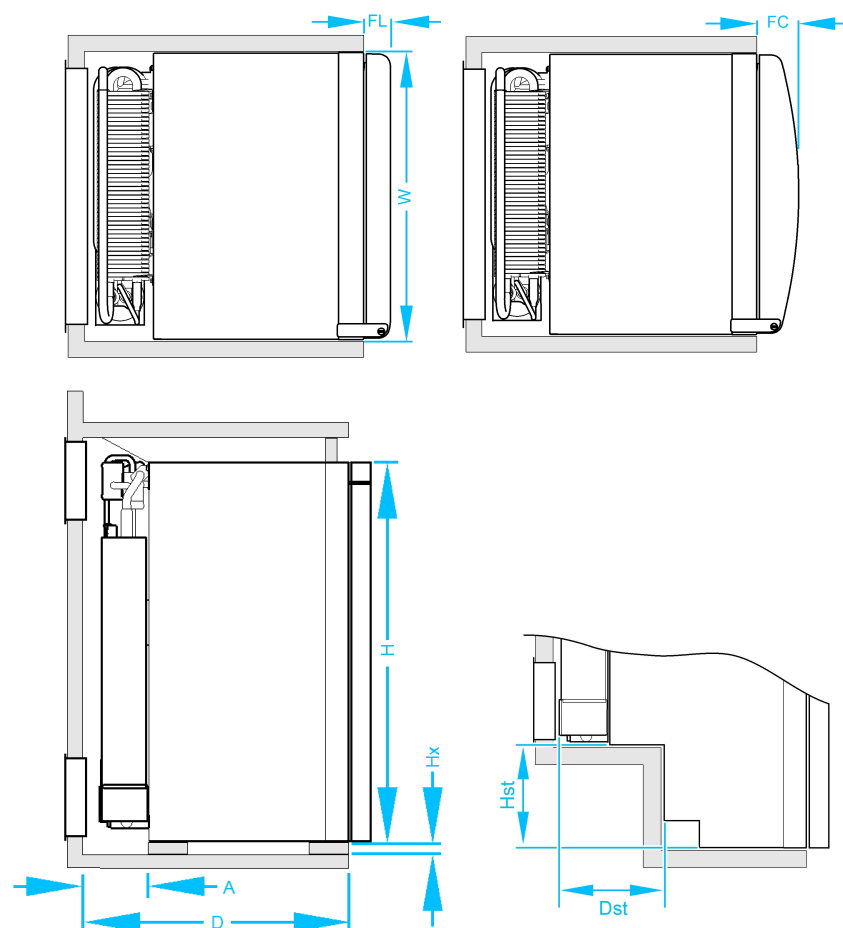

Model	H	W	D	A	Hst	Dst	FL	FC	Hx
N3080	825	487.5- 490	535-570	135-170	209	186	43	-	-
N3090	825	526.5- 529	535-570	135-170	209	186	43	-	-
N3097	825	526.5- 529	535-570	135-170	209	186	-	78	-
N3100	825	526.5- 529	535-570	135-170	-	-	43	-	-
N3104	825	526.5- 529	535-570	135-170	-	-	-	78	-
N3108	825	526.5- 529	585-620	135-170	209	186	43	-	-
N3112	825	526.5- 529	585-620	135-170	209	186	-	78	-
N3115	825	526.5- 529	585-620	135-170	209	186	-	100	-
N3141	1500*	419.5- 422	535-570	135-170	-	-	41	-	12
N3142	1500*	419.5- 422	535-570	135-170	-	-	41	-	12
N3145	1249	526.5- 529	535-570	135-170	-	-	43	-	-
N3150	1249	526.5- 529	535-570	135-170	-	-	-	78	-
N3170	1249	526.5- 529	585-620	135-170	-	-	43	-	-
N3175	1249	526.5- 529	585-620	135-170	-	-	-	78	-



If the combustion seals are not being used or fail to seal properly in the unit, use a different kind of sealing to keep hazardous combustion gases out of the living area of the vehicle.


* Dimension is excluding feet. Additional height feet: 3 mm.

10 VENTS

The refrigerator performance depends on good ventilation. Ventilation takes place through two vents in the wall of the vehicle.

Working principle

Cold air comes in through the lower vent, passes the cooling unit and leaves hot through the upper vent (chimney effect).

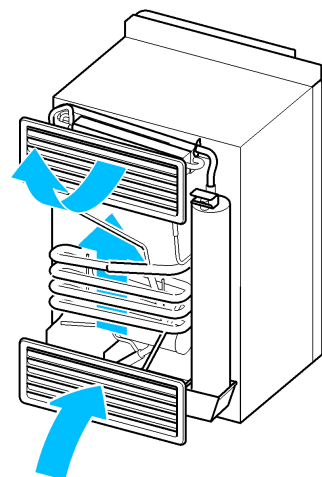


Positioning situations




Recommended

The recommended installation is when the vents aren't covered.

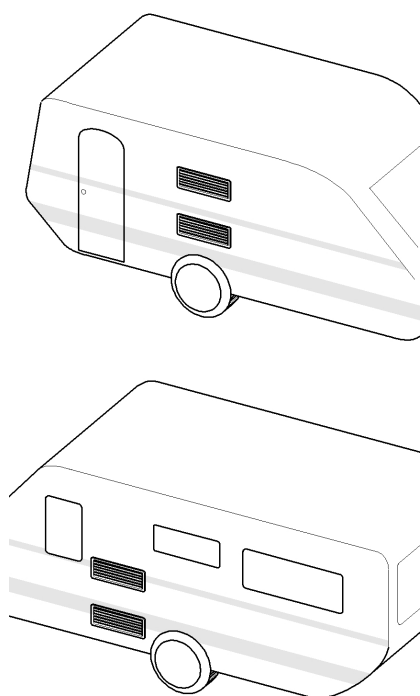

Good


When installation is next to the caravan door, make sure that there will be at least a 25 mm distance between the vents and the door.

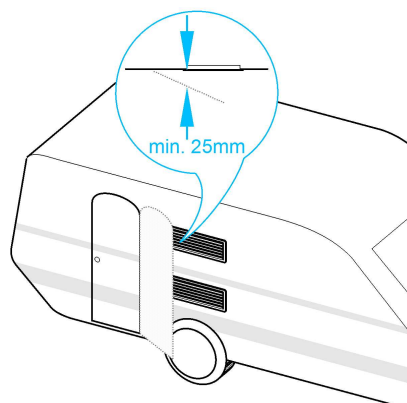




Not recommended

The installation is not recommended, when combustion gases may enter the living area.

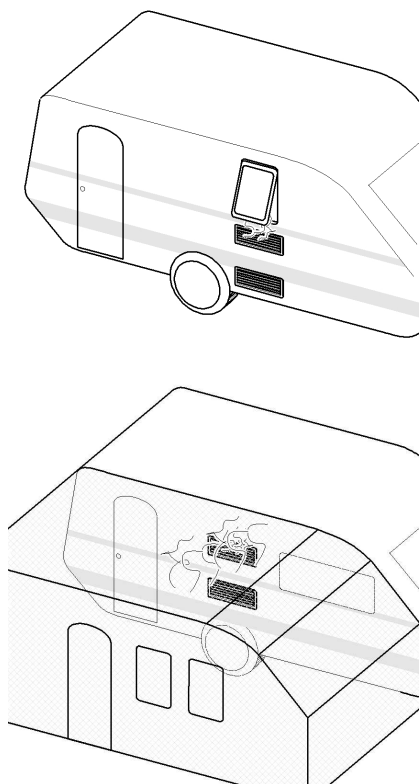





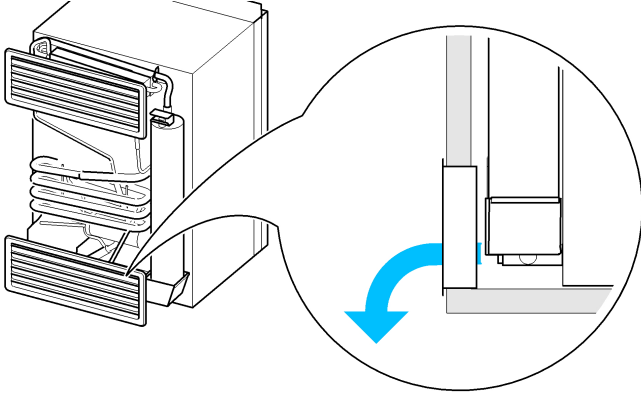
Wrong

Make sure vents can't be blocked. An insufficient air supply can result in incomplete combustion, the forming of carbon monoxide and reduction of cooling performance.





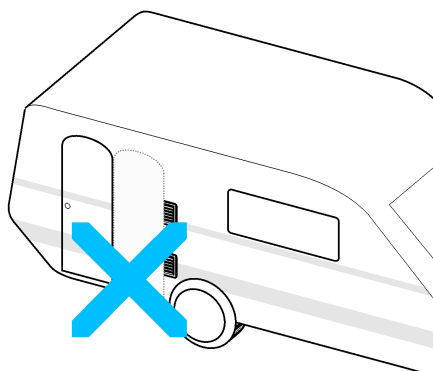


Vent size				
	Model	186 x 483	257 x 432	281 x 533
	N3080	✓		
	N3090	✓		
	N3097	✓		
	N3100	✓		
	N3104	✓		
	N3108	✓		
	N3112	✓		
	N3115	✓		
	N3141		✓	
	N3142		✓	
	N3145			✓
	N3150			✓
	N3170			✓
	N3175			✓

10.1 Vent 186 x 483
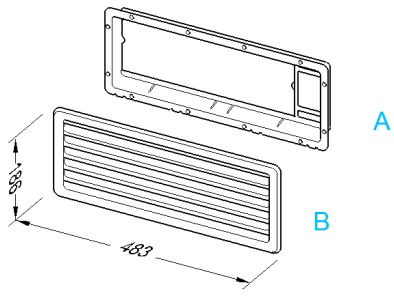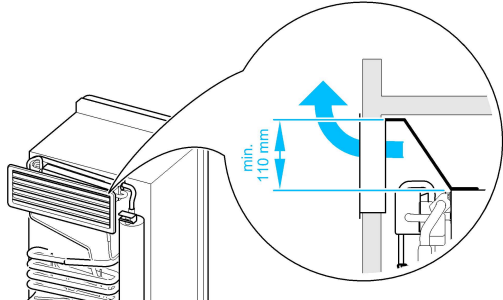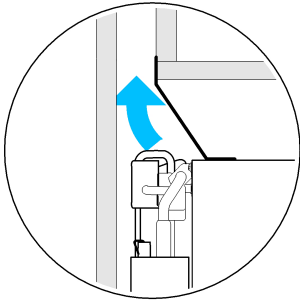
<p>A = vent frame B = vent outer</p>		
<p>Upper vent</p>	<p>Ventilation can be achieved through installation of an upper vent (1-preferred), or a chimney on the roof (2).</p>	
	<p>1.</p> 	<p>2.</p> 
<p>Lower vent</p>	<p>Make sure, that with a chimney on the roof, the refrigerator is still accessible for service.</p> <p>This vent must be positioned behind the burner box and the power board. This vent is also used for periodical maintenance or repairs to the refrigerator.</p>	
	 <p>If the lower vent is not on floor level, make sure all unburned gas will go to the outside (for example via a hole in the floor).</p>	
<p>Installation</p>	<p>See le965</p>	


10.2 Vent 257 x 432

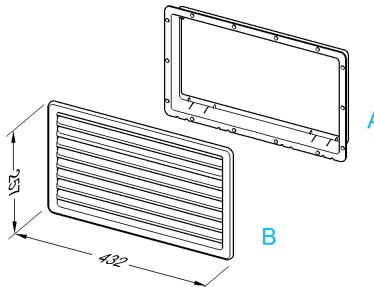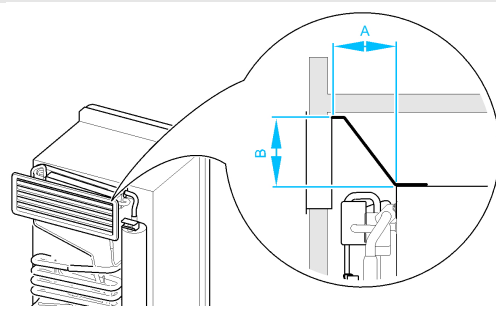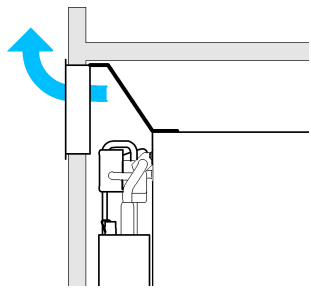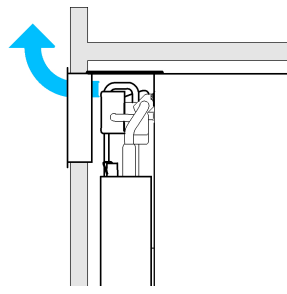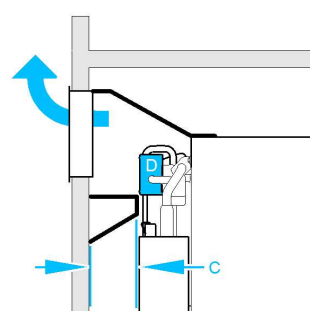A = vent frame B = vent outer											
Upper vent	Ventilation can be achieved through installation of an upper vent. There are 3 possibilities, depending on dimension A and B.										
Build-in dimensions											
	1. Preferred build-in situation A = 135 ± 5 mm B > 130 mm	2. A = 135 ± 5 mm B = 0 ± 5 mm Vent in line with top refrigerator	3. 140 mm < A < 170 mm and B > 70 mm								
											
	Combustion flaps necessary from top refrigerator to top vent		Combustion flaps necessary from top refrigerator to top vent, plus a baffle [C] from the bottom of the condenser [D].								
Baffle		Baffle dimensions: <table><tr><th>Dimension A</th><th>Dimension C</th></tr><tr><td>140–150mm</td><td>30mm</td></tr><tr><td>150-160mm</td><td>40mm</td></tr><tr><td>160-170mm</td><td>50mm</td></tr></table>		Dimension A	Dimension C	140–150mm	30mm	150-160mm	40mm	160-170mm	50mm
Dimension A	Dimension C										
140–150mm	30mm										
150-160mm	40mm										
160-170mm	50mm										

Lower vent	This vent must be positioned behind the burner box and the power board. This vent is also used for periodical maintenance or repairs to the refrigerator.
<div data-bbox="284 701 335 750" data-label="Image"> </div>	<div data-bbox="443 313 1029 672" data-label="Image"> </div> <p data-bbox="363 694 1356 761">If the lower vent is not on floor level, make sure all unburned gas will go to the outside (for example via a hole in the floor).</p> <p data-bbox="363 761 478 788">See le965</p>
Installation	


10.3 Vent 281 x 533

A = vent frame
B = vent outer

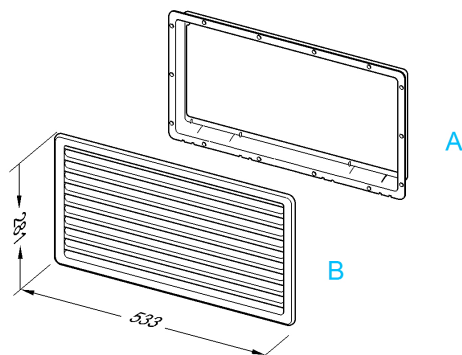


Upper vent

Ventilation can be achieved through installation of an upper vent

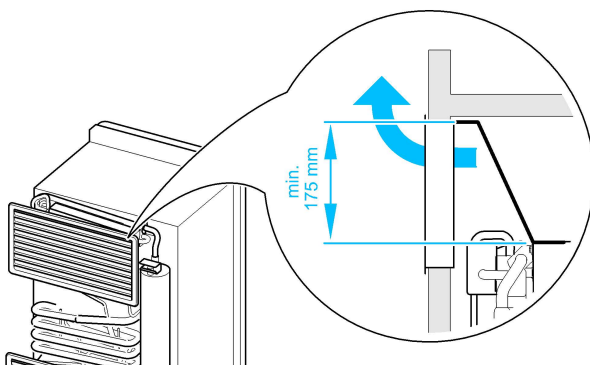

Lower vent

This vent must be positioned behind the burner box and the power board. This vent is also used for periodical maintenance or repairs to the refrigerator.

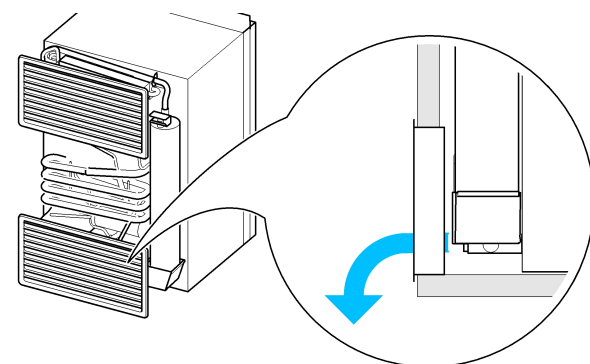



If the lower vent is not on floor level, make sure all unburned gas will go to the outside (for example via a hole in the floor).

Installation

See le965

11 SEALING
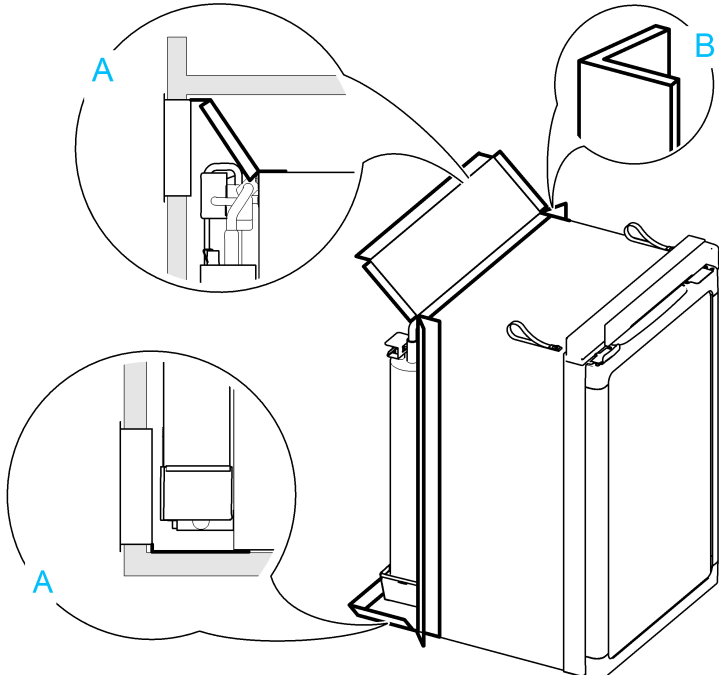
<p>Position sealing</p>	
<p>Fixation sealing</p>	<p>Fix the strips to the sides of the refrigerator (B) in a vertical direction at the rear of the refrigerator. Fix the upper and lower flap of the combustion sealing (A) as the drawing shows.</p>
	<p>The sealing area must be separated air-tight from the living area.</p>

12 DOOR PANELS FRAMED DOORS



A door panel for a framed door should be fitted **before** installing the refrigerator.


Door panel Panel sizes	Panels for framed doors are not supplied by Thetford.				
	Model	Door type	Thickness (mm)	Panel size (mm)	
				height	width
	N3080	Flat	3	732	426
	N3090/N3100	Flat	3	732	464
	N3097/N3104/ N3109/N3112	Curved	3	740	469
	N3141	Flat cabinet	2.7	950	393
			2	950	394
			1.5	950	395
		Flat drawer	2.7	453	393
			2	453	394
			1.5	453	395
	N3142	Flat	2.7	1425	393
			2	1425	394
			1.5	1425	395
	N3145/N3170	Flat cabinet	3	865	464
		Flat freezer	3	271	464
	N3150/N3175	Curved cabinet	3	876	469
		Curved freezer	3	275	469

Installation door panel


For all models
(**except**
N3141/N3142)

Demount the door from the refrigerator, remove the panel retainer and slide the door panel into the holder.


1.

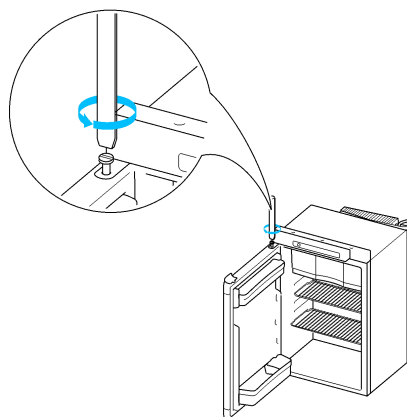


2.





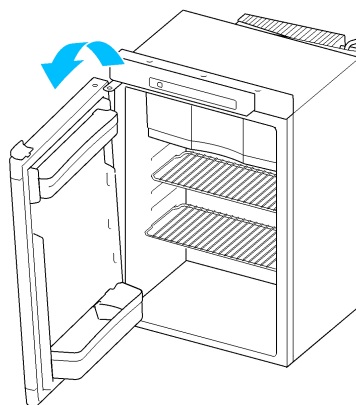


3.

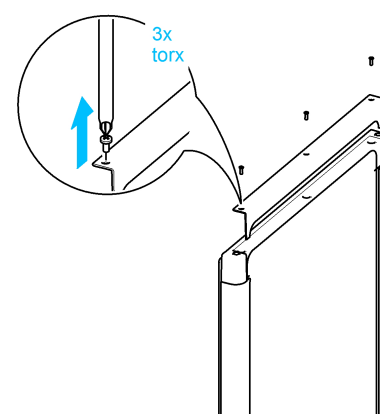

4.

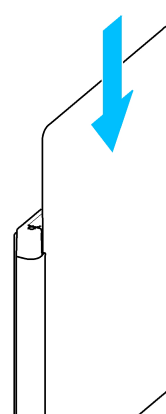

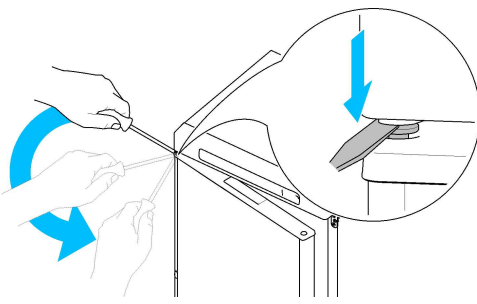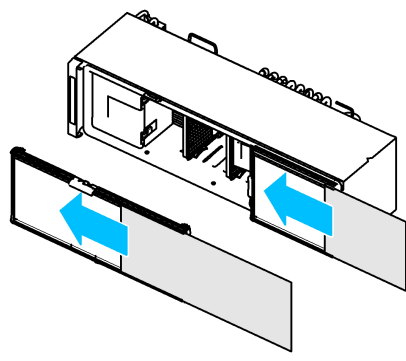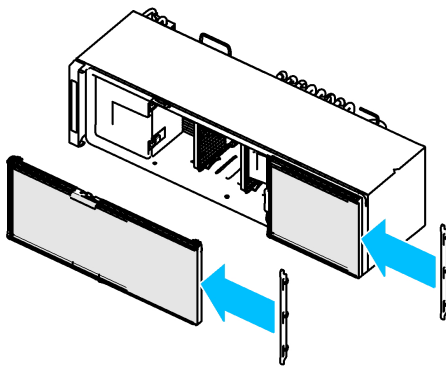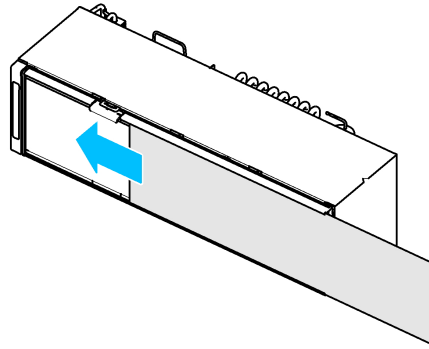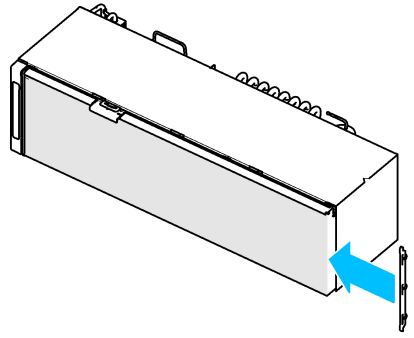
<p>For N3141</p>	<p>Remove the cabinet door, slide in panels in the door and the drawer, click the panel retainers in place and place door back.</p> <p>1.</p>  <p>2. Slide in panels</p>  <p>3. Click panel retainers</p> 
<p>For N3142</p>	<p>Slide in panel in door and click the panel retainer in place.</p> <p>1.</p>  <p>2.</p> 

Remove panel retainer

N3141/N3142

Pull and rotate the panel retainer, as illustrated. First in the middle (1), then on the left and right (2).

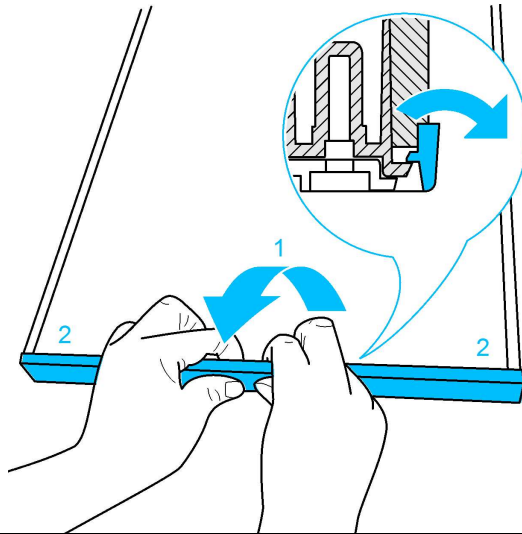

13 DOOR CONVERSION

Door conversion can be realised in some small and easy steps.




With a door conversion also change the position of the slide-out box.


Door

Open the door a bit, remove the hinge pin (1), and lift the door out of the hinges (2). Then move the lock on the refrigerator from one side to the other (3). Exchange the hinges, handle, hinge pin and hinge hole plug from one side to the other on the door (4).


1.

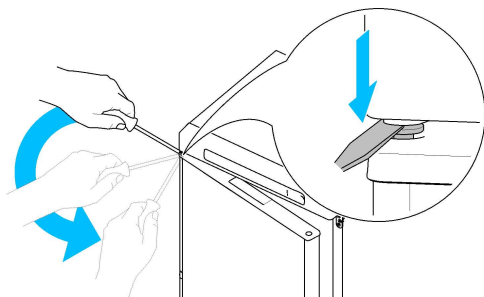


2.

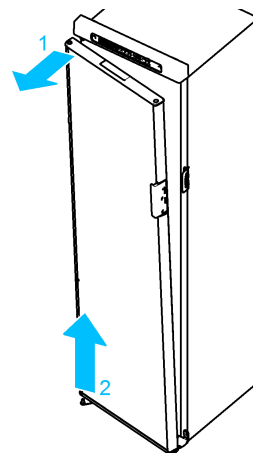

3.

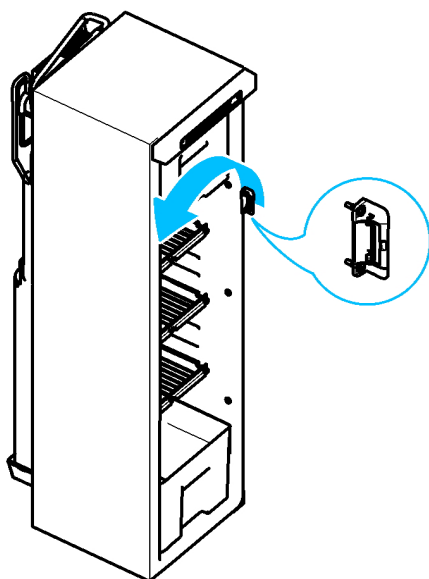

4.

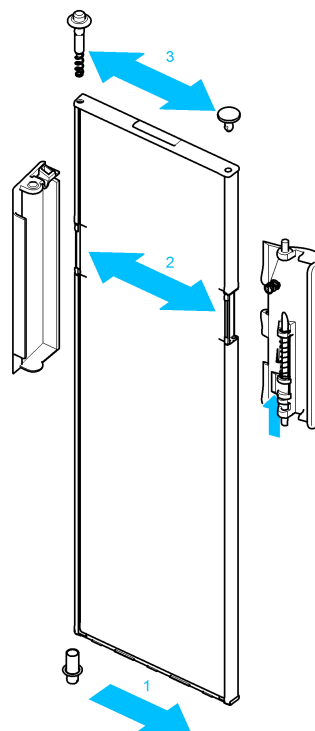


See movie 'N3000 series - door conversion N3141/N3142' for more detailed information.

INSTALLATION
INSTRUCIONS


Slide-out box

Remove the slide-out box (1), move the slide-out box system to the right (2) and take the rail system out. Place back the slide-out box system on the left of the shelf, place the box back in the rail system.

1.

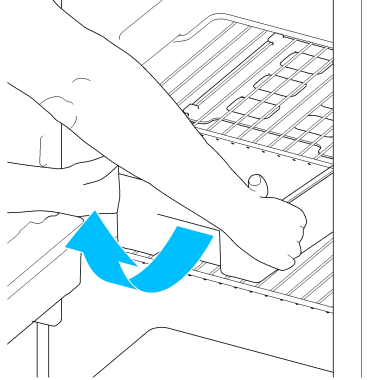

2.

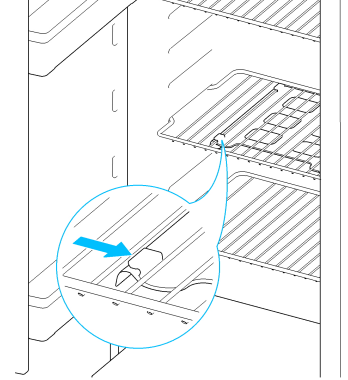

14 HANDLING

All refrigerators




Never lift or handle a refrigerator at the power supply cables.

Only small refrigerators (height 825mm)




Only carry the refrigerator at the strap handles on top (1). Do not use your knee to lift the refrigerator (2).

1.

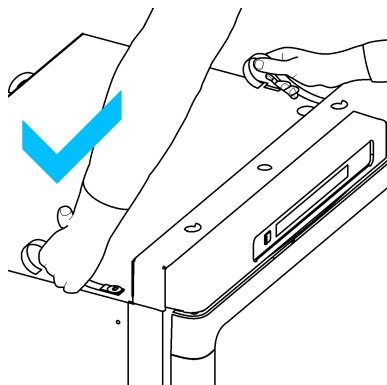


2.

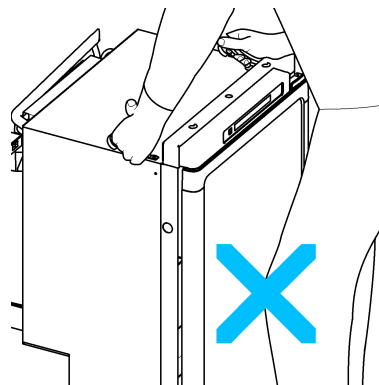

OPTIONS

15 VENTILATOR KIT

The Ventilator Kit enhances the cooling performance of the refrigerator in very high ambient temperatures. The Ventilator Kit can be installed on all Thetford refrigerators.

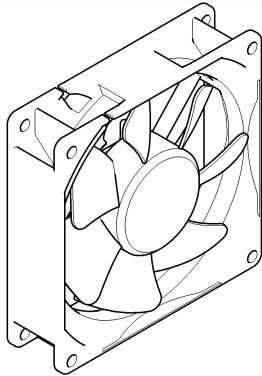

Installation

See installation instructions p/n 632850

CONTACT

EUROPEAN HEADQUARTER

Thetford B.V.
Nijverheidsweg 29
P.O. Box 169
4870 AD Etten-Leur
The Netherlands

T +31 (0)76 5042200
F +31 (0)76 5042300
E info@thetford.eu

UNITED KINGDOM

Thetford Ltd.
Unit 6
Brookfields Way
Manvers
Rotherham
S63 5DL, England

T +44 (0)844 997 1960
F +44 (0)844 997 1961
E info@thetford.eu

GERMANY

Thetford GmbH
Schallbruch 14
D-42781 Haan
Deutschland

T +49 (0) 2129 94250
F +49 (0) 2129 942525
E: infod@thetford.eu

FRANCE

Thetford S.A.R.L.
Bâtiment Le Californie
11, Rue Rosa Luxembourg
CS 40204 Eragny sur Oise
95614 Cergy PONTOISE Cedex
France

T +33 (0)1 30 37 58 23
F +33 (0)1 30 37 97 67
E infof@thetford.eu

ITALY

Thetford Italy c/o Tecma s.r.l.
Via Flaminia
Loc. Castel delle Formiche
05030 Otricoli (TR)
Italia

T +39 0744 709071
F +39 0744 719833
E infoi@thetford.eu

SPAIN AND PORTUGAL

Mercé Grau Solà
Agente para España y Portugal
C/Castellet, 36 bxs 2ª
08800 Vilanova i la Geltrú
Barcelona
España

T +34 938 154 389
F not available
E info@thetford.eu

SCANDINAVIA

Thetford B.V.
Representative Office Scandinavia
Hönekullavägen 13
43544 Mölnlycke
Sverige

T +46 (0)313363580
F +46 (0)31448570
E infos@thetford.eu

AUSTRALIA

Thetford Australia Pty. Ltd.
41 Lara Way
Campbellfield VIC 3061
Australia

T +61 (0)3 9358 0700
F +61 (0)3 9357 7060
E infoau@thetford.eu

635190/1114-V24

Thetford is not responsible for printing errors and reserves the right to make changes to product specifications without notice.